


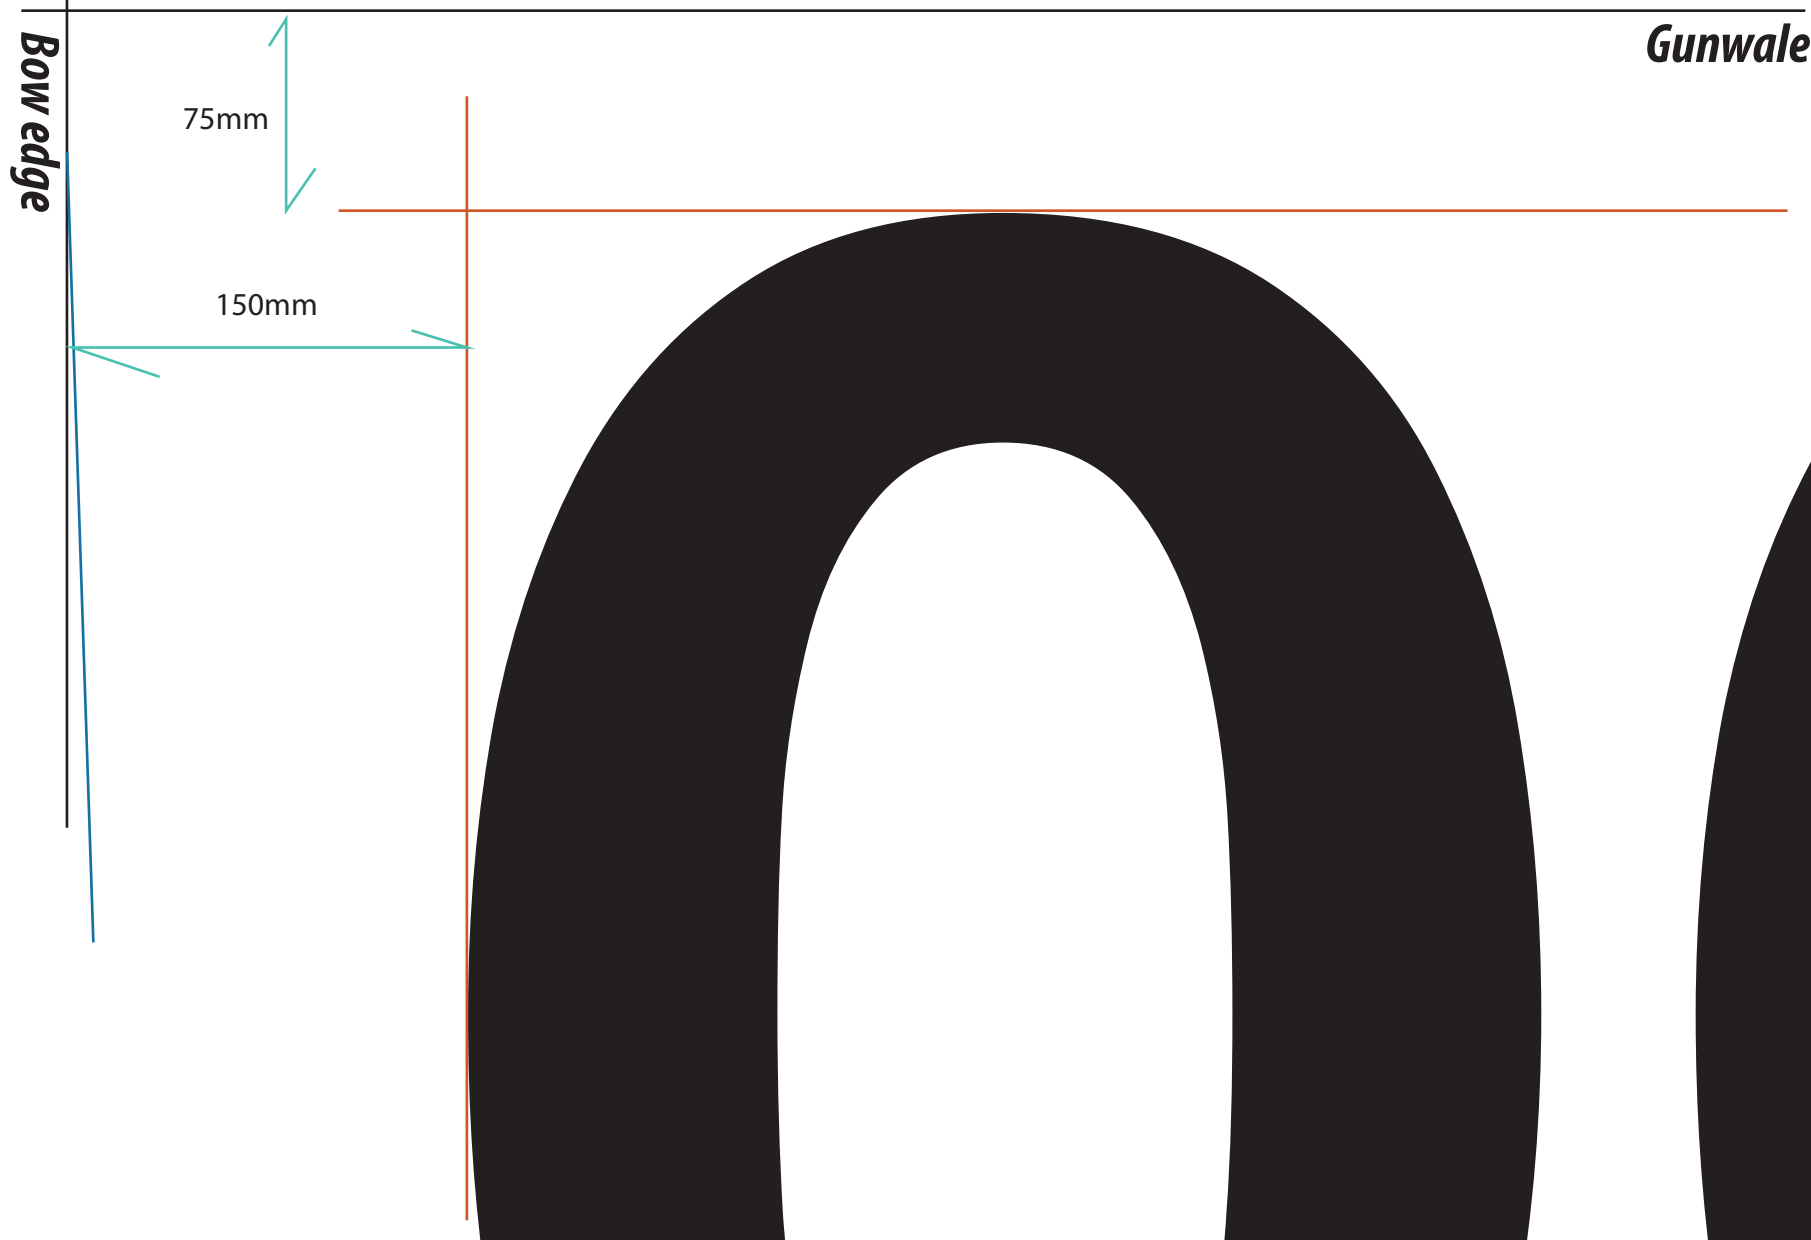

Port Side Bow Number Positioning Guideline

- 1) Measure down 75mm below your gunwale, and make a mark on your hull at the 75mm line. Use masking or blue paint tape. Mark every 6" (your numbers are approximately 24" wide)
- 2) Make a mark at the 150mm line back from your bow. Use masking or blue paint tape. This line will be the positioning for the left side of your bow number





Starboard Side Bow Number Positioning Guideline

- 1) Measure down 75mm below your gunwale, and make a mark on your hull at the 75mm line. Use masking or blue paint tape. Mark every 6" (your numbers are approximately 24" wide)
- 2) Make a mark at the 150mm line back from your bow. Use masking or blue paint tape. This line will be the positioning for the right side of your bow number

Gunwale

Bow edge

75mm

150mm

11.5 A Viper 640 shall carry permanent bow numbers, with 3 numerals, provided by the Class approved vendor in the font, style and colors specified by the Class. The bow number shall be the boat's hull number, unless another number is allocated by the International Board of Governors. The numbers are to be positioned 75mm from the lower edge of the gunwale and 150 mm aft of the bow on both sides. (Effective Date: October 1, 2020)